


ARC Riser rail

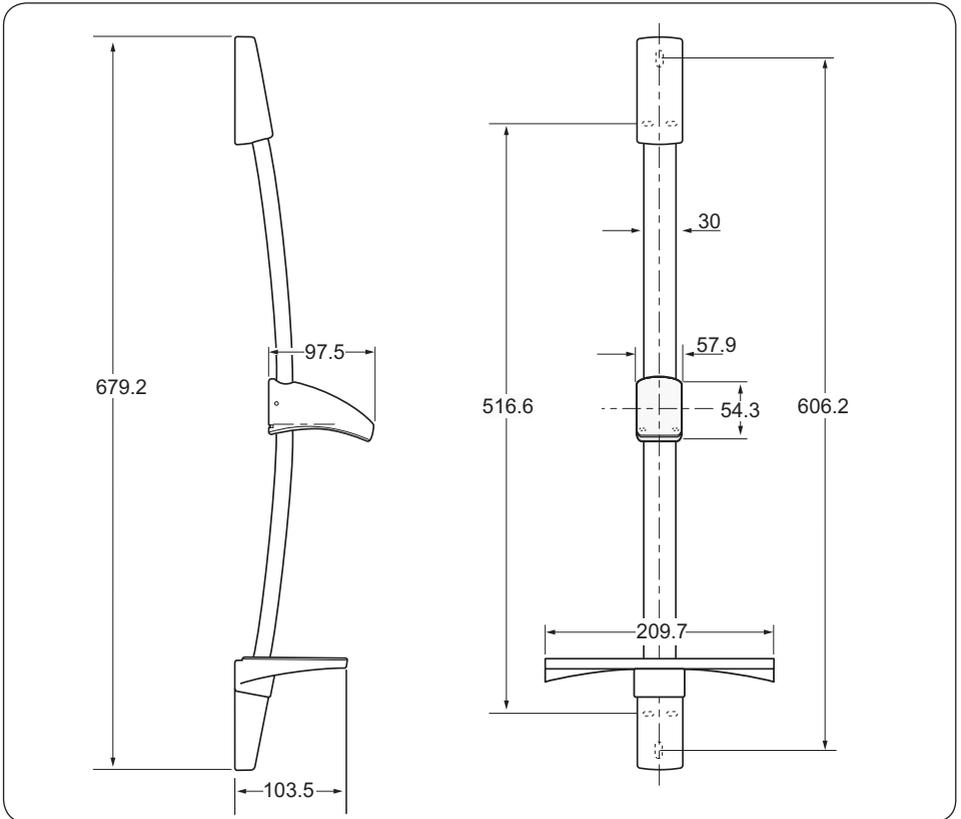

Installation Instructions

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER

Fig.1



Fig.2

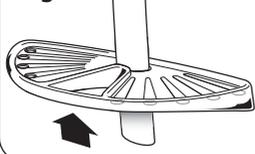


Fig.3

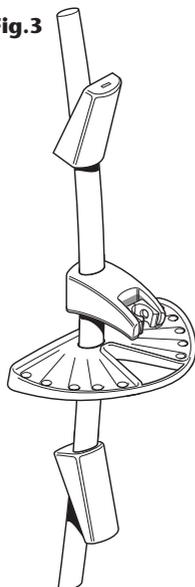


Fig.5


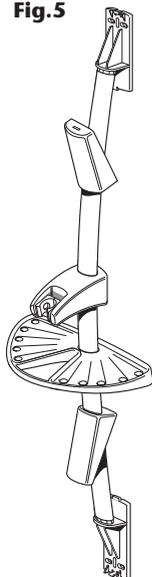


Fig.4

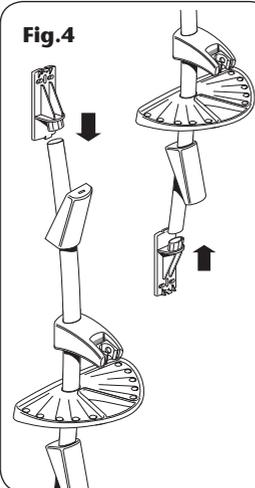

WARNING!

Check there are no hidden cables or pipes before drilling holes for wall plugs. Use great care when using power tools near water. The use of a residual current device (RCD) is recommended.

Decide the position for the rail on the wall within the shower area. Proceed as follows:
Fit the showerhead holder onto the riser rail. The correct orientation of the holder is when the showerhead holder is sloping DOWN (**fig.1**).

To fit the showerhead holder onto the riser rail unit, press and hold the button on the underneath of the showerhead holder to release the locking mechanism, then slide onto the rail. Slide the supplied soap dish onto the riser rail below the showerhead holder (**fig.2**).

Slide the top and bottom finishing trims onto the riser rail (**fig.3**).

Push the two fixing brackets into the ends of the riser rail (**fig.4**).

Offer the rail assembly to the wall (**fig.5**). Using the brackets as templates, mark two upper holes and two lower holes.

Note: There are four provisions for screws per bracket — select the two most suitable for your requirements. Make sure the rail is aligned vertically.

Drill and plug the wall. (*The wall plugs provided are suitable for most brick walls — use an appropriate masonry drill, but if the wall is plasterboard or a soft building block, use suitable wall plugs and an appropriate drill bit.*)

Screw to the wall with the fixing screws supplied.

Slide the finishing trims onto the brackets. Make sure the lug on each rail bracket end engages into the slot on the fatter end of each trim before push fitting the thinner ends in place (**fig.6**).

To remove a trim, push a small screwdriver or similar through the slot in the trim end and carefully pull away from the wall bracket.




Slide the soap dish down the rail so that its bracket engages on top of the lower finishing trim.

ADJUSTING THE SHOWERHEAD HOLDER

To adjust the height, press the button underneath the holder to release the locking mechanism (**fig.7**). Still pressing the button, move the holder up or down to suit user's requirement.


FITTING THE HOSE

Feed the flexible hose through the soap dish opening (**fig.8**) so the dish acts as a retaining ring (Water Regulations).

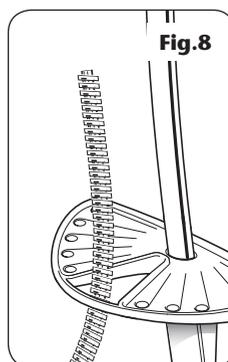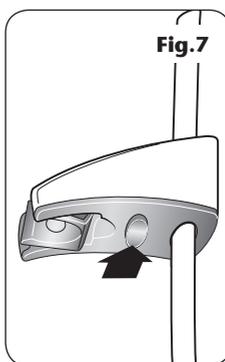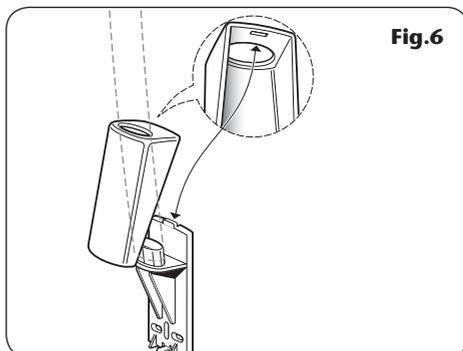

SPARE PARTS

Ref.	Description	Spares No.
–	Kit complete (excluding hose, showerhead, riser rail)	
	white	86000850
	chrome	86000840
1.	Brackets (pair)	22010430
2.	Trims (pair)	
	white	22010440
	chrome	22010740
3.	Riser rail	
	aluminium	22011310
	chrome	22010750
	white	22010450
4.	Showerhead holder	
	chrome	22010730
	white	22010460
5.	Soap dish – clear	22010470
–	Flexible hoses available in the following sizes:	
	1.00 m in white, chrome and gold	
	1.25 m in white, chrome and gold	
	1.75 m in chrome only	

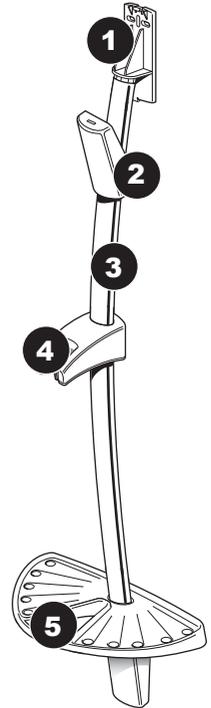

Please refer to shower installation and operating instructions for service details