



## 3 in 1 Tap Installation Guide

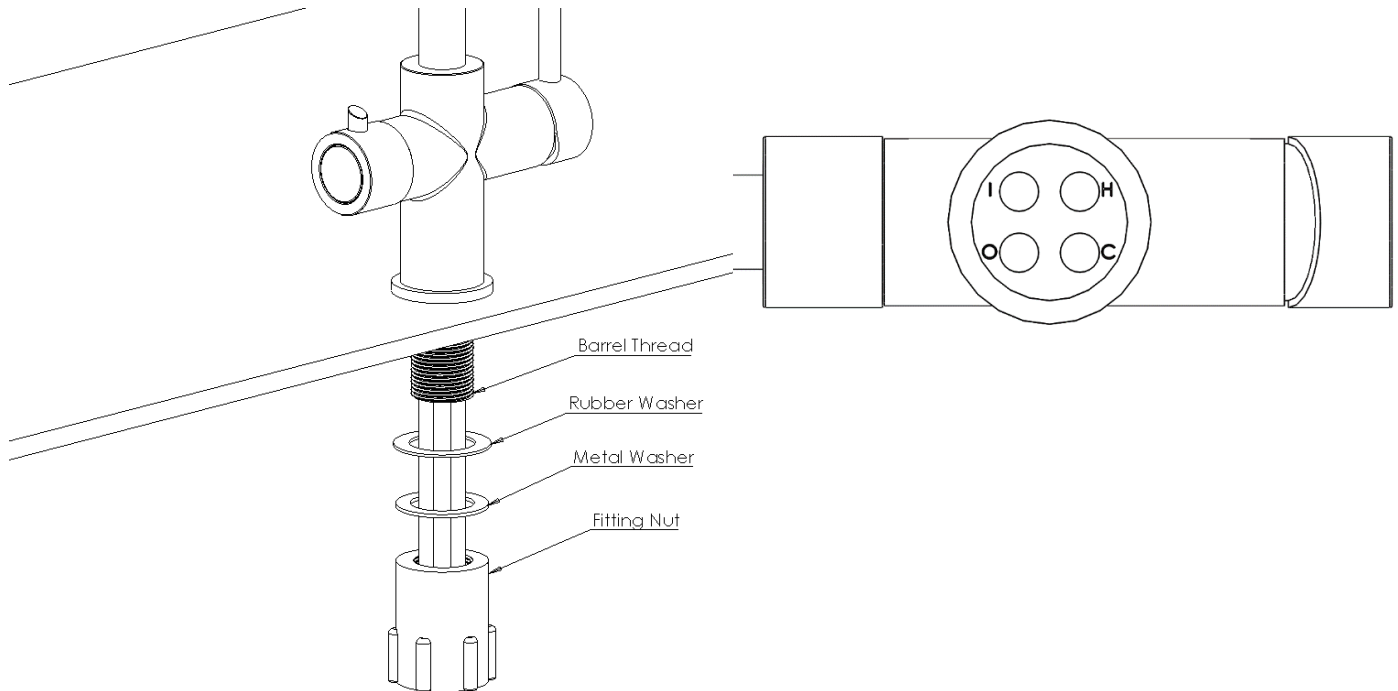

Feed the tails through the barrel thread and hand tighten into the tap. Fit the tap in the desired location using the black plastic fitting nut.

| Fitting | Description                                                                          |
|---------|--------------------------------------------------------------------------------------|
| I       | Pre-Installed Silicone Hose Connects to Barb Fitting on Boiler Tank with Fixing Clip |
| O       | Flexi Hose (Blue Stripe (Water to Boiler)) Connected 'To' Filter                     |
| C       | Flexi Hose (Blue Stripe (Max 3Bar)) Connected to Incoming Main Cold                  |
| H       | Flexi Hose (Red Stripe (Max 3Bar)) Connected to Incoming Domestic Hot                |


For servicing purposes, the services provided by the customer should have means of isolation. These should terminate with ½" BSP male fittings to accept the tap flexible tails (1 and 2).

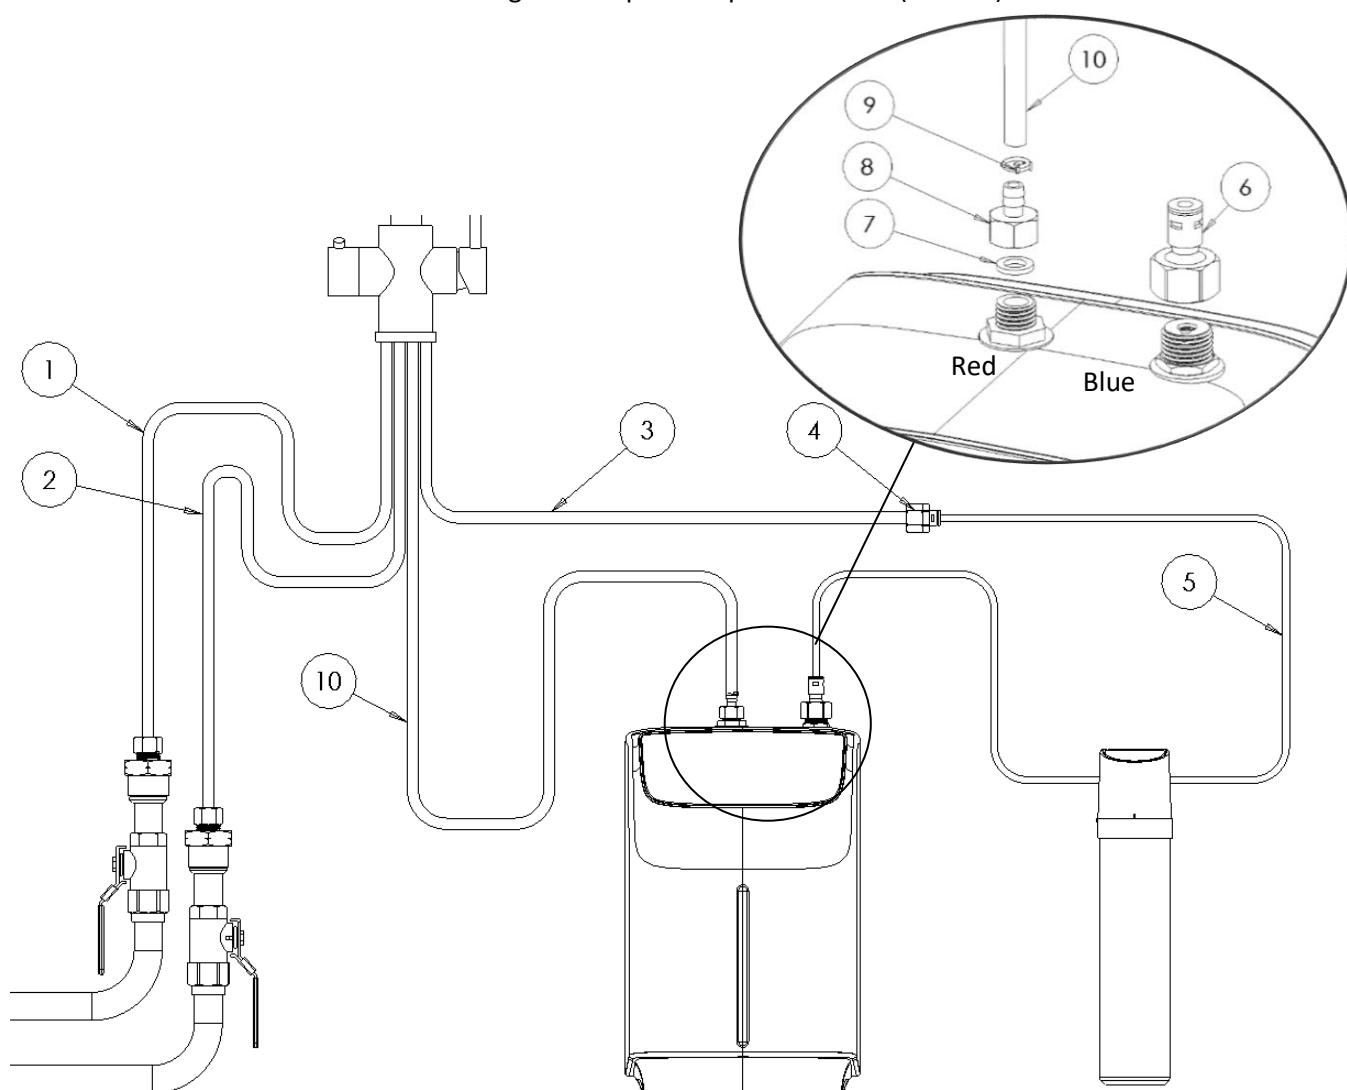

| No. | Description                                                                           | QTY | Packed with |
|-----|---------------------------------------------------------------------------------------|-----|-------------|
| 1   | Flexi Hose (Blue Stripe (Max 3Bar)) Connected To 'C' on Tap then Incoming Main Cold   | 1   | Tap         |
| 2   | Flexi Hose (Red Stripe (Max 3Bar)) Connected To 'H' on Tap then Incoming Domestic Hot | 1   | Tap         |
| 3   | Flexi Hose (Blue Stripe (Water to Boiler)) Connected To 'O' on Tap then Fitting '4'   | 1   | Tap         |
| 4   | 1/2" Male BSP to 6mm Push Fit                                                         | 1   | Filter      |
| 5   | 1m-6mm PE Pipe (To Cut)                                                               | 1m  | Filter      |
| 6   | 1/2" Female BSP to 6mm Push Fit                                                       | 1   | Filter      |
| 7   | Silicone Washer                                                                       | 1   | Boiler Tank |
| 8   | 3/8" to Barb                                                                          | 1   | Boiler Tank |
| 9   | Fixing Clip                                                                           | 1   | Tap         |
| 10  | Pre-Installed Silicone Hose                                                           | 1   | Tap         |

A switched socket outlet is required to power up the boiler tank, this must be fitted in accordance with the current IEE Wiring Regulations.

# Installation/Maintenance Manual

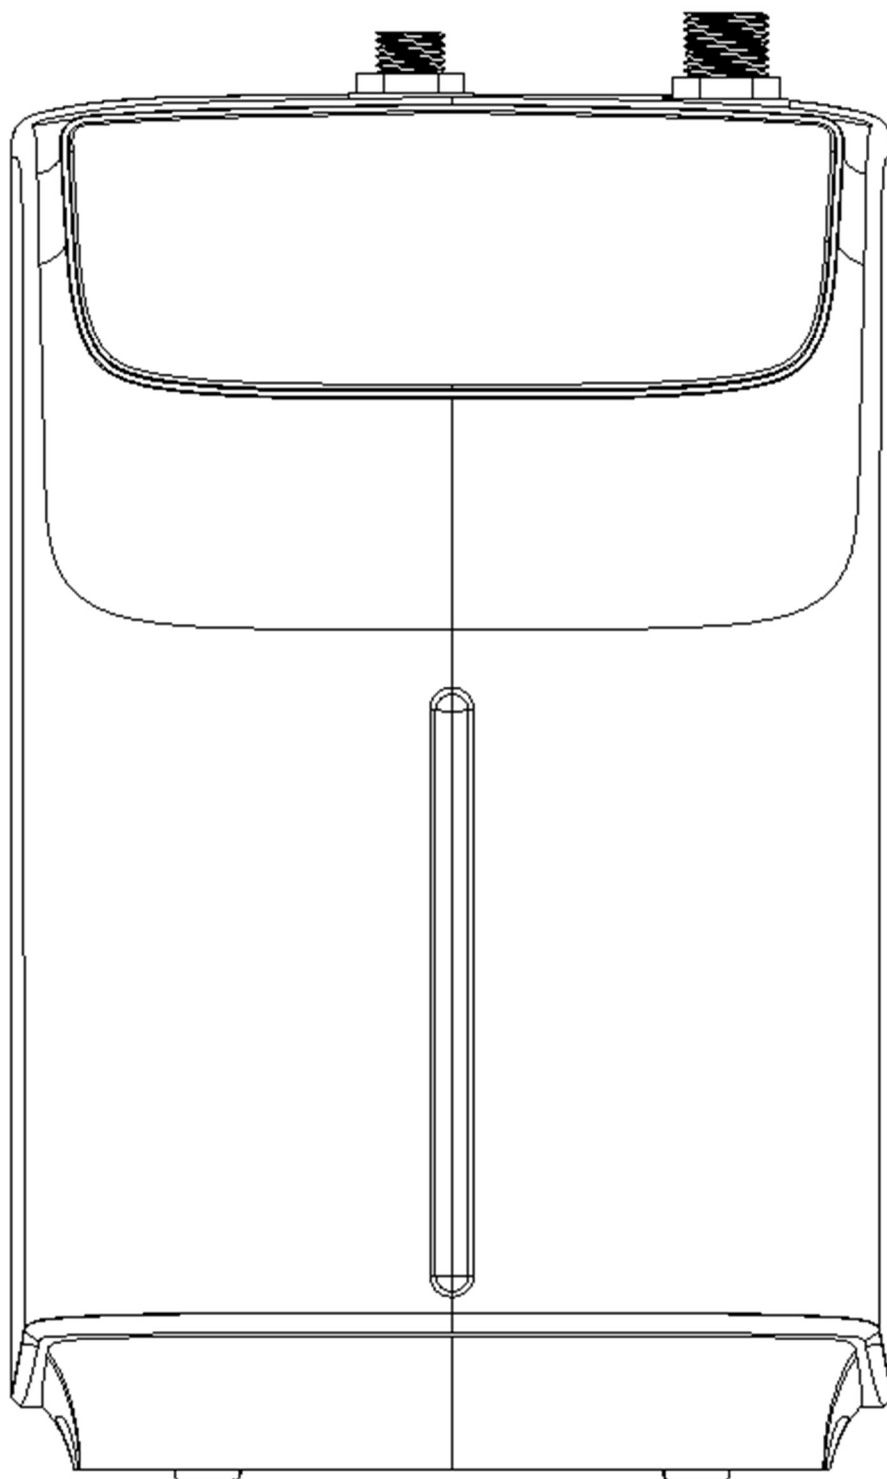

We are delighted that you have chosen our instant boiler and tap. This unique electronic instant hot water appliance will save you time and effort when requiring near boiling water for making tea and coffee and we are sure you will discover many new uses each day.

For your safety, please read and follow our step-by-step guide to the installation, operation and care for the electronic instant hot water appliance and you will soon be making that first cup of coffee or tea from your new appliance.

This electronic instant hot water appliance is not intended for commercial use.

**IMPORTANT NOTICE:** This product can cause harm if installed incorrectly and should only be installed by a competent person, if you feel for any reason unsure about the installation, please contact a qualified plumber or electrician to install the appliance.

Make sure all electrical wiring and connections conform to local standards.

Make sure all water connections conform to local standards.

A standard 220/240v grounded 13 amp switched electrical socket outlet is required under the sink for the electronic instant hot water appliance.

Alteration to the 13amp fused moulded plug supplied will invalidate your warranty.

**The instant hot water appliance is an open vented system appliance it is important never to restrict pipework.**

The water filter must be connected to the electronic instant hot water appliance. Failure to change filter every 6 months (less if you live in a hard water area) may invalidate your warranty.

PLEASE READ ALL INSTRUCTIONS CAREFULLY

**⚠ WARNING**

When using all electrical appliances, basic safety precautions should always be followed including the information below:

**⚠ DANGER**

To protect against electrical shock, do not place cord, plugs or unit near or in water or other liquids and do not operate the electronic instant hot water appliance controls or power socket with wet hands.

Check the power rating of your electronic instant hot water appliance is suitable for the power rating of the electrical circuit it is being installed on.

Do not operate or install the electronic instant hot water appliance if it appears to have missing parts, be damaged / faulty e.g., damaged cord, plug.



Do not use outdoors or in a damp area.

Do not use the electronic instant hot water appliance for anything other than the intended **Domestic** use.

The electronic instant hot water appliance must be installed vertically as shown on front cover with inlet and outlet connections at the top of appliance.

Ensure the front of the unit is visible, unobstructed and the front controls can be easily reached.

Do not attempt to open, modify or service this electronic instant hot water appliance. Repairs should be carried out by Authorised Service personnel. Opening the unit will void the guarantee.

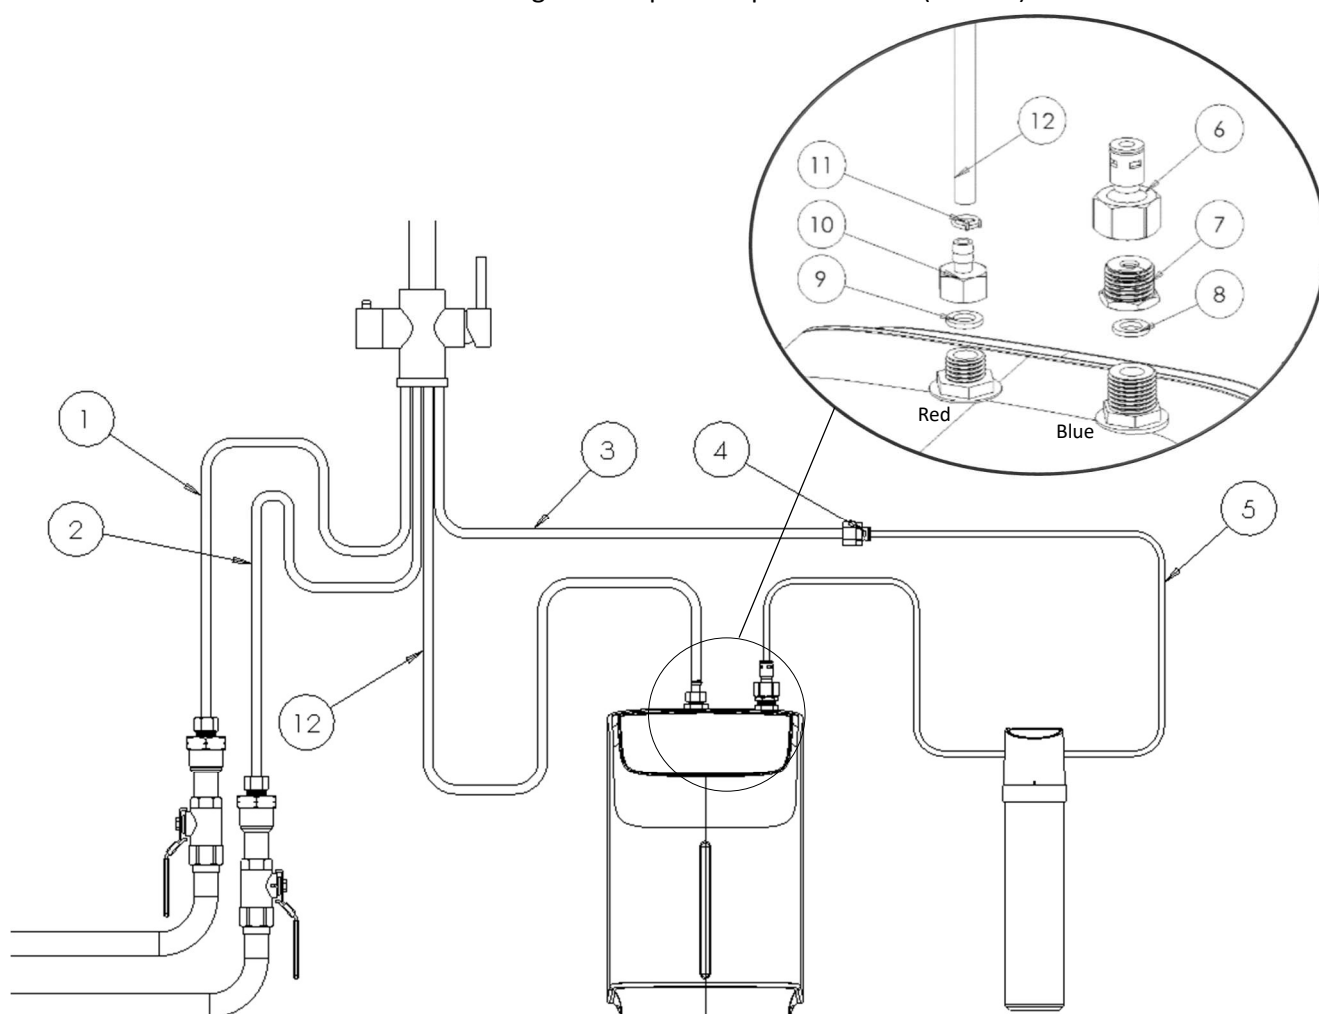

| No. | Description                                                                           | QTY | Packed with |
|-----|---------------------------------------------------------------------------------------|-----|-------------|
| 1   | Flexi Hose (Blue Stripe (Max 3Bar)) Connected To 'C' on Tap then Incoming Main Cold   | 1   | Tap         |
| 2   | Flexi Hose (Red Stripe (Max 3Bar)) Connected To 'H' on Tap then Incoming Domestic Hot | 1   | Tap         |
| 3   | Flexi Hose (Blue Stripe (Water to Boiler)) Connected To 'O' on Tap then Fitting '4'   | 1   | Tap         |
| 4   | 1/2" Male BSP to 6mm Push Fit                                                         | 1   | Filter      |
| 5   | 1m-6mm PE Pipe (To Cut)                                                               | 1m  | Filter      |
| 6   | 1/2" Female BSP to 6mm Push Fit                                                       | 1   | Filter      |
| 7   | 3/8" to 1/2" Adapter                                                                  | 1   | Boiler Tank |
| 8   | Silicone Washer                                                                       | 1   | Boiler Tank |
| 9   | Silicone Washer                                                                       | 1   | Boiler Tank |
| 10  | 3/8" to Barb                                                                          | 1   | Boiler Tank |
| 11  | Fixing Clip                                                                           | 1   | Tap         |
| 12  | Pre-Installed Silicone Hose                                                           | 1   | Tap         |

A switched socket outlet is required to power up the boiler tank, this must be fitted in accordance with the current IEE Wiring Regulations.

**This electronic instant hot water appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the electronic instant hot water appliance or instant hot water tap, a safety spring back is used to control the flow of the near boiling water for additional safety.**

**PLEASE READ ALL INSTRUCTIONS PRIOR TO INSTALLATION.**

**Installation**

**Do not power up the boiler tank until all pipework is complete and checked to ensure there are no leaks.**

It is recommended that a qualified person installs this system.

Install the tap using the instructions provided with the tap.

Position the boiler tank in a suitable position close to the tap, ensuring that the silicone hose **(12)** can be connected without being stretched, restricted, or twisted.

Make sure the filter is fitted close to the boiler tank allowing space for a small amount of pipe between the filter and the boiler tank.

The boiler tank is fitted with a 3/8" male thread for both the inlet and outlet.

Fasten the 3/8" to 1/2" Adapter **(7)** to the inlet of the boiler tank (Blue), making sure to include the washer **(8)**. Next, fasten the 1/2" Female BSP to 6mm Push Fit **(6)** to the adapter **(7)**. Do not over tighten as this will cause the washer to split and the system will leak.

Fasten the 3/8" to Barb **(10)** to the outlet of the boiler tank (Red), making sure to include the washer **(9)**. Do not over tighten as this will cause the washer to split and the system will leak.

The incoming mains cold & domestic hot water supplies should have isolation means and terminate with 1/2" BSP male threads, close to the tap flexible tails.

Fasten the Flexi Hose (Blue Stripe (Max 3Bar)) **(1)** to the incoming main cold with a wrench.

Fasten the Flexi Hose (Red Stripe (Max 3Bar)) **(2)** to the incoming domestic hot with a wrench.

Fasten the Flexi Hose (Blue Stripe (Water to Boiler)) **(3)** to the 1/2" Male BSP to 6mm Push Fit **(4)**.

**Ensure the hoses have no twists or kinks and do not overtighten when fastening.**

The 1m PE Pipe **(5)** must be cut into two lengths before installation. The length will depend on your positioning of the filter and boiler tank. When cutting the PE pipe make sure there is no swarf in the pipe as this **will** restrict flow through the boiler tank.

You will need to run the first length of the PE pipe from the 1/2" Male BSP to 6mm Push Fit **(4)** to the filter.

Then run the other length of the PE pipe from the filter to the 1/2" Female BSP to 6mm Push Fit **(6)** on the boiler tank.

To secure the PE Pipe into the push fit pieces, push into the hole until it stops. Then pull it to make sure it is fitted properly.

Attach the Pre-Installed Silicone Hose **(12)** to the Barb Fitting **(8)**. Make sure the hose is snug around the fitting and secure by sliding the fixing clip **(11)** over the barb.

### **Priming**

Before powering up the boiler tank you must first prime the boiler tank and make sure there are no leaks.

Open the isolation valves attached to the mains supply to allow water flow. Then press and turn the hot water handle on the tap until water begins to flow from the spout. This may take around 90 seconds. The water will not be hot as we haven't supplied power to the tank yet. The boiler tank is now primed.

Check all connections for leaks. If there is a sign of leakage make sure the connection has been tightened sufficiently. Press and turn the hot water handle again to ensure all leaks have been dealt with.

If you try to power on the tank before priming the display will read an 'E3' error message. This is because there is no water in the tank.

### **Powering On**

Connect the plug to a nearby power socket and turn on at the switch.

Touch the illuminated, red on/off button

You should begin to see activity on the display of your boiler tank.

The left of the display will show the current temperature of the water inside the tank. The right of the display will show the temperature it is set to heat up to.

**As a safety feature, the tank will not begin heating up until you chose a desired temperature by toggling the illuminated red 'Set Temp.' button until you reach the temperature you want.** Available temperatures are, 75°C, 85°C, 90°C, 95°C or 98°C. This will only be required during set up or when it is powered on again.

Once heating has started the display will flash, the left-hand temperature will rise until it matches the set temp.

If you see an error message on the display 'E4' then please unplug and plug the boiler back into the power socket. If the issue persists, please contact the service centre.

If the tank is left on but has no water inside, then the boiler tank will automatically shut off after 5 minutes until it has been primed again using the instructions set out earlier.

When the water inside the boiler tank drops 2° below the temperature threshold, it will automatically begin to reheat the water till it reaches the set target.

If the electronic instant hot water appliance is not being used for long periods of time i.e.:

Over 7 days, to save power we recommend you switch off using the "ON/OFF" switch.

### **Environment**

The boiler tank must not be exposed to below freezing temperatures. If for whatever reason, there is a possibility of this happening you must drain the system of water. Shut off the mains and isolate the boiler tank system. Disconnect from the power supply and allow the tank to cool for at least 1 hour. Once cooled, disconnect the inlet supply and tip upside down into the sink to empty of water.

To reinstall, repeat installation instructions above.

You should regularly perform visual checks on the operation of the tank and look for any leaks in the system. If you find a leak you may either need to re-tighten the connections or replace any split rubber washers, silicone tubes, or flexi tails that may be causing the leaks.

| PROBLEM                                                          | POSSIBLE CAUSE                                                                                                                                            | WHAT TO DO                                                                                                                                        |
|------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Water and Steam is spitting from the instant hot water tap spout | Unit is boiling                                                                                                                                           | Turn the instant hot water tap handle on and release the water                                                                                    |
|                                                                  | Pressure is lower than 1.5 bar or higher than 5 bar                                                                                                       | Check pipe pressure. Check if aerator is blocked and remove the dirt in the aerator                                                               |
| Water is not hot                                                 | The electronic instant hot water appliance is unplugged                                                                                                   | Make sure the electronic instant hot water appliances plugged in and connected to a grounded electric outlet                                      |
|                                                                  |                                                                                                                                                           | Make sure that the circuit breaker and fuse are working correctly                                                                                 |
| Water is too hot                                                 | Water temperature setting is set to high temperature                                                                                                      | Re-set the temperature to the lower temperature                                                                                                   |
| Water is dripping from the instant hot water tap spout           | The expansion chamber isn't draining the system correctly due to very small draw off water                                                                | Draw off 0.5L of water to clear and prime the system. Avoid less than 150ml draw offs of water                                                    |
|                                                                  | The spout is blocked                                                                                                                                      | Remove and clean the aerator                                                                                                                      |
| Slow flow from the spout                                         | Water filter may be clogged from impurities in the inlet mains water                                                                                      | The water filter must be changed every 6 months, or this will void guarantee                                                                      |
| Water does not flow straight away                                | The electronic instant hot water appliance is designed for non-pressurised operation and there will be a slight delay till the near boiling water appears | After a large volume of water has been drawn off there may be a slightly longer delay in the water appearing from the instant hot water tap spout |
| No water flowing                                                 | Water valves have been turned off                                                                                                                         | Turn on all water valves                                                                                                                          |



|                  |                                          |                                                                                                                                      |
|------------------|------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| No water flowing | Inlet pipes have been blocked or twisted | Ensure the pipes are non-twisted or kinked to restrict flow                                                                          |
|                  |                                          | Remove and clean the aerator                                                                                                         |
|                  |                                          | Remove the electronic instant hot water appliance as per the descaling instructions and flush through all pipes to ensure water flow |

| PROBLEM                                                          | WHAT TO DO                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Water continues to flow more than 5 seconds after handle release | <p>It is advisable to isolate the water supply to the 3 in 1 tap before commencing, prior to doing so fill a pouring jug with water (this will be needed at a later stage to prime the filter)</p> <p>The next step would be to remove the filter from its housing by twisting, have a cloth at hand to place under the filter housing to collect any excess water (the amount of water should be minimal)</p> <p>Hold the filter in the sink and slowly pour water into the top opening, as you are doing this, air bubbles will probably be visible, continue until the air bubbles disappear (1 litre of water should suffice, be sure to pour slowly)</p> <p>Keeping the filter upright slowly replace into the housing, twisting until the arrows line up.</p> |
| PROBLEM CAUSE                                                    | Turn the water supply to the 3 in 1 tap back on and test the flow, the problem should now be solved.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Air Trapped Inside Filter                                        | <p><b>It is advisable to operate taps slowly when first used after the water supply has been isolated, to avoid splashing from the mixture of air and water!</b></p> <p>Once the filter has been primed the problem should not return, due to the fact that the water heater has an internal expansion vessel to cope with the water temperature rise, on rare occasions air can be trapped which gradually makes its way to the filter. Generally, all air is pushed out of the system on the initial install or within 24hrs, but it is not uncommon for air to be trapped for up to several weeks.</p>                                                                                                                                                           |

