


Mira Jump

mira
Jump

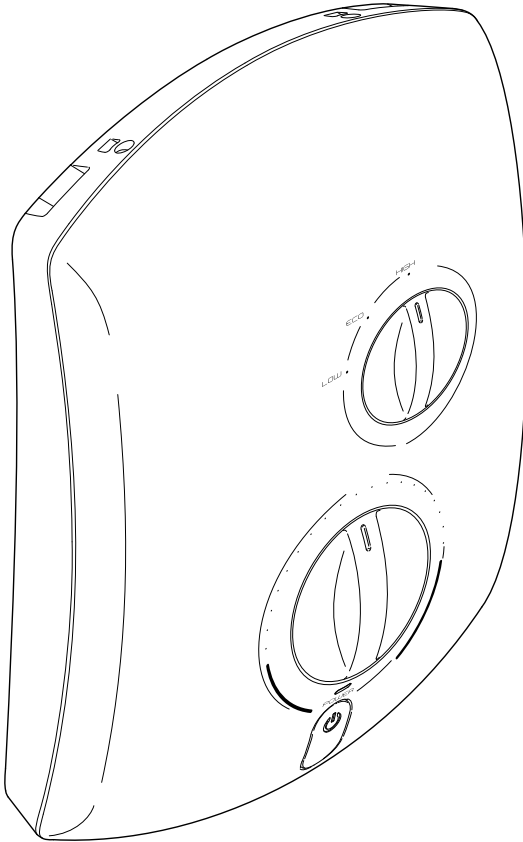

MIRA JUMP

ELECTRIC SHOWER

Installation and User Guide

These instructions are to be left with the user

CONTENTS

Introduction	3
Guarantee	3
Recommended Usage	3
Patents and Design Registration.....	3
Important Safety Information	4
Pack Contents	6
Specifications	7
Dimensions.....	7
Wiring Diagram.....	8
Plumbing	9
Electrical.....	9
Standards and Approvals	9
Flow Rate Graph	9
Installation Requirements	10
Plumbing	10
Electrical.....	12
Installation	13
Replacing a Shower	13
New Installation.....	14
Connecting Electricity and Water Supplies	15
Commissioning	17
Operation	18
Fault Diagnosis	20
Maintenance	24
Accessories	25
Spare Parts	26
Customer Service	Back Cover

If you experience any difficulty with the installation or operation of your new shower control, then please refer to '**Fault Diagnosis**', before contacting Mira Showers. Our telephone and fax numbers can be found on the back cover of this guide.

INTRODUCTION

Thank you for purchasing a quality Mira Jump Electric Shower. To enjoy the full potential of your new shower, please take time to read this guide thoroughly, and keep it handy for future reference.

Mira Jump electric showers have separate controls for heater selection and for temperature/flow adjustment. A unique flow regulator stabilises any temperature changes caused by water pressure fluctuations, which can result from taps being turned on or off or toilets being flushed.

Products covered by this guide:

Mira Jump 8.5 A 8.5kW 240V ac (7.8kW 230V ac). Available in a white/chrome finish.

Mira Jump 9.5 A 9.5kW 240V ac (8.7kW 230V ac). Available in a white/chrome finish.

Mira Jump 10.8 A 10.8kW 240V ac (9.9kW 230V ac). Available in a white/chrome finish.

Guarantee

For **domestic installations**, Mira Showers guarantee the Mira Jump against any defect in materials or workmanship for a period of **2 years** from the date of purchase (shower fittings for one year).

For **non-domestic installations**, Mira Showers guarantee the Mira Jump against any defect in materials or workmanship for a period of **1 years** from the date of purchase.

For Terms and Conditions refer to the back cover of this guide.

Recommended Usage

Recommended Usage	
Domestic	✓
Light Commercial	✓
Heavy Commercial	✗
Healthcare	✗

Patents

Patent Applications	GB: 2 427 460 Ireland: 2006/0462
----------------------------	-------------------------------------

IMPORTANT SAFETY INFORMATION

Installation **must** be carried out in accordance with these instructions, and **must** be conducted by designated, qualified and competent personnel.

Warning!

Follow all warnings, cautions and instructions contained in this guide, and on or inside the appliance.

1. Products manufactured by us are safe and risk-free, provided that they are installed, used and maintained in good working order, in accordance with our instructions and recommendations.
2. Isolate the electrical and water supplies before connecting to the appliance.
3. Mains electrical connections are exposed when the cover is removed.
4. Refer to the wiring diagram before making any electrical connections (refer to the wiring diagram in this guide).
5. Make sure that this guide is left with the user.
6. **DO NOT** commission this appliance if water leaks from the unit or the heater tank pressure relief valve (bottom of the tank).
7. **DO NOT** fit any form of outlet control (e.g. Trigger handset) as the outlet acts as a vent for the tank body. Only Mira recommended outlet fittings should be used.
8. Make sure all electrical connections are tight, to prevent overheating.
9. The shower unit **must** not be fitted where it may be exposed to freezing conditions. Make sure that any pipework that could become frozen is properly insulated. Warning, do not operate this appliance if it appears to be frozen, allow to thaw and then contact your installer before using again.
10. This product is not suitable for areas with high humidity (i.e steam rooms).
11. **THE APPLIANCE MUST BE EARTHED. MAKE SURE SUPPLEMENTARY BONDING COMPLIES WITH THE “REQUIREMENTS FOR ELECTRICAL INSTALLATIONS”.**

This appliance is intended to be permanently connected to the fixed electrical wiring of the mains system.
12. If the wiring layout is changed or amended, the product functionality and safety may be affected.



Caution!

1. The electrical installation **must** comply to “BS 7671 - Requirements for Electrical Installations”, commonly referred to as the IEE Wiring Regulations - Part 7, or any particular regulations and practices, specified by the local electricity supply company.
2. The plumbing installation **must** comply with the requirements of UK Water Regulations/Bye-laws (Scotland), Building Regulations or any particular regulations and practices, specified by the local water company or water undertakers.
3. Make sure that users fully understand how to operate the shower and that it should be maintained properly in accordance with the instructions given in this guide.
4. Anyone who may have difficulty understanding or operating the controls of any shower should be attended whilst showering. Particular consideration should be given to:
 - 4.1. The young.
 - 4.2. The elderly.
 - 4.3. The infirm.
 - 4.4. The disabled.
 - 4.5. Anyone who suffers from a medical condition that can result in temporary incapacity (e.g. epilepsy or blackouts).
 - 4.6. Anyone inexperienced in the correct operation of the controls.
5. Children should be supervised to make sure that they do not play with the appliance.
6. Sunburn or skin conditions can increase sensitivity to hot water. Users should make sure that the shower is set to a cooler temperature if required.
7. If any of the following conditions occur, isolate the electricity and water supplies and refer to “To contact us”, in the back pages of this guide:
 - 7.1. If the cover is not correctly fitted and water has entered the appliance case.
 - 7.2. If the case is damaged.
 - 7.3. If the appliance begins to make an odd noise, smell or smoke.
 - 7.4. If the appliance shows signs of a distinct change in performance, indicating a need for maintenance.
 - 7.5 **DO NOT** operate if water leaks from the appliance.
 -
8. When the appliance has reached the end of its serviceable life, it should be disposed of in a safe manner, in accordance with current local authority recycling or waste disposal policy.


PACK CONTENTS

Tick the appropriate boxes to familiarise yourself with the part names and to confirm that the parts are included.


Mira Jump 8.5kW, 9.5kW or 10.8kW Electric Shower

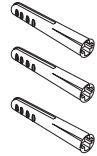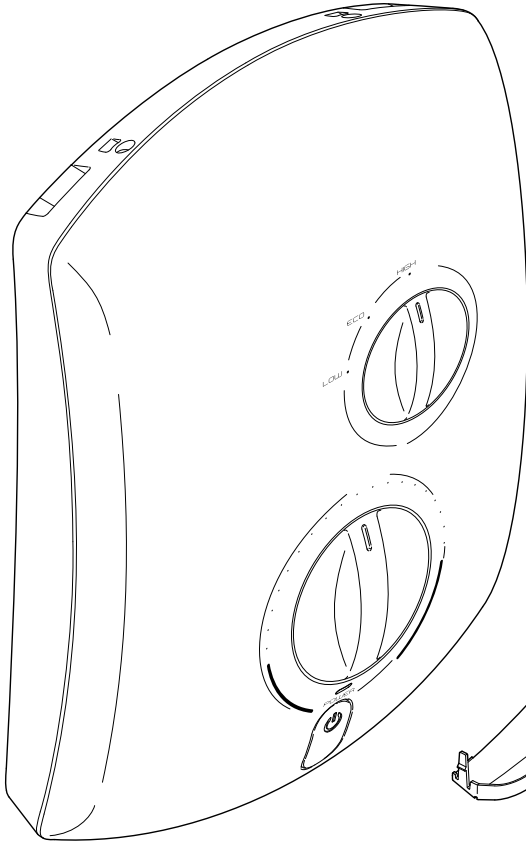

3 x Wall Plugs

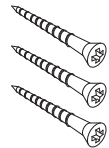

3 x Fixing Screws

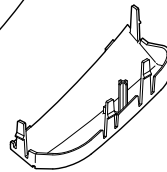

1 x Blank Insert


1 x Mira Jump Electric Shower

Documentation


1 x Installation and User Guide

1 x Installation Template

1 x Guarantee Brochure

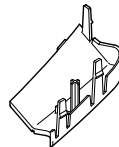


1 x Insert RH
1 x Insert LH

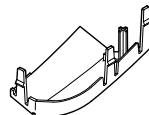


SPECIFICATIONS

Dimensions

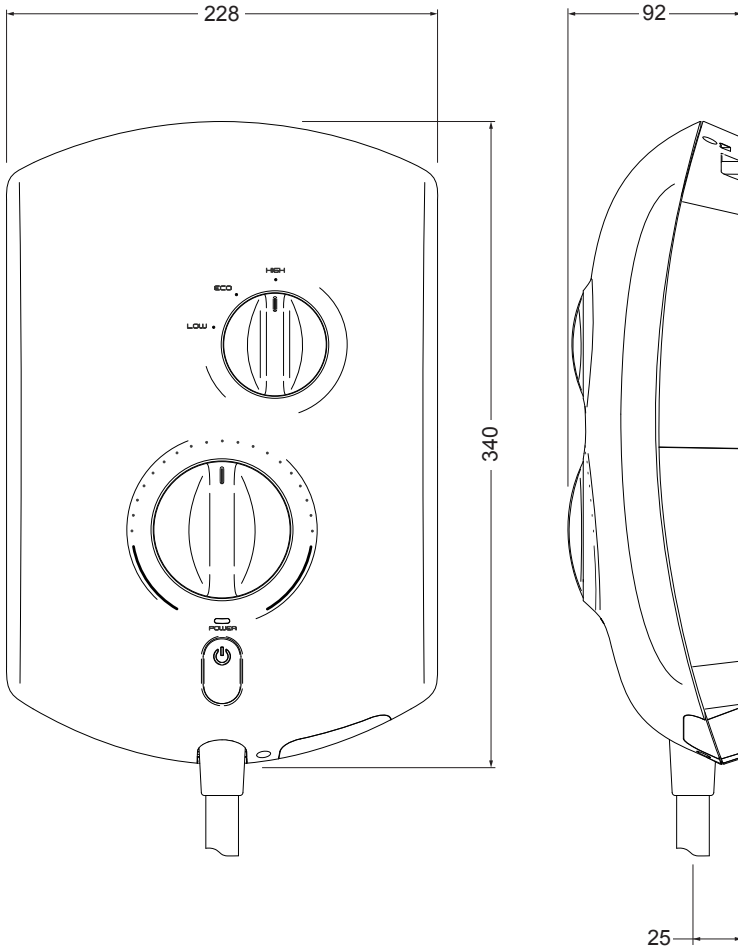

All dimensions are nominal and in millimetres.

Wiring Diagram

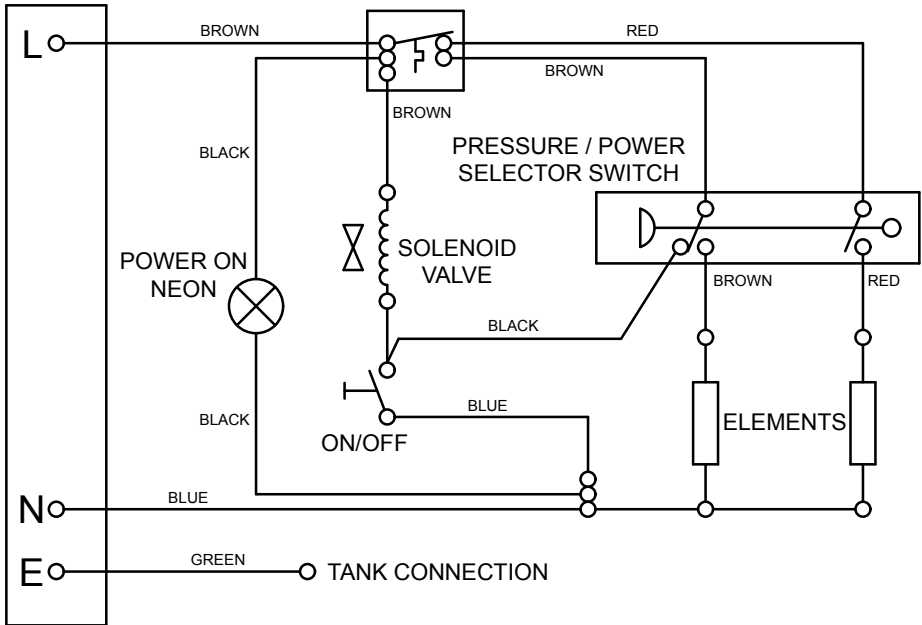

Plumbing

1. Minimum maintained inlet pressure for satisfactory operation:
8.5kW and 9.5kW: 70kPa (0.7 bar).
10.8kW: 100kPa (1.0 bar).
2. Maximum static inlet pressure: 1000kPa (10 bar).
3. Minimum static pressure to keep the flow valve closed: 50kPa (0.5 bar).

Electrical


1. The 8.5kW and 9.5kW appliance requires a 40Amp fuse.
The 10.8kW requires a 45 Amp fuse.
2. The terminal blocks will accept cable up to 16mm².
3. The Mira Jump is suitable for installation within zone 1 and is rated IPX4.

Standards and Approvals

1. This Mira Jump shower complies with all of the relevant directives for CE marking.

Flow Rate Graph

1. These curves are for the specified outputs at 240V.
2. All appliance heating elements have a manufacturing tolerance. Flow rates may be above or below those shown on the flow rate graph.
3. The left-hand axis shows temperature rise.
Temperature rise = (Showering temperature) - (Supply water temperature)

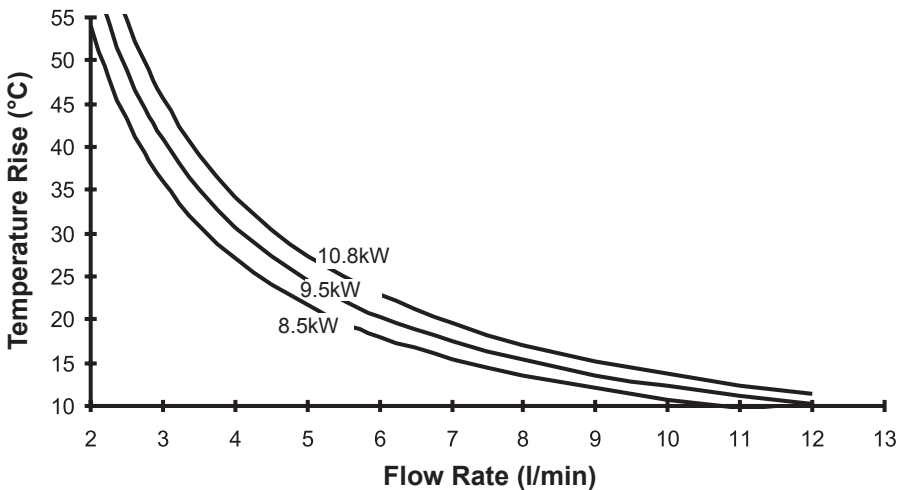

INSTALLATION REQUIREMENTS


Plumbing

1. The Mira Jump 8.5kW and 9.5kW electric showers are designed to operate with a **minimum maintained inlet pressure of 70kPa (0.7 bar)** up to a **maximum static inlet pressure of 1000kPa (10 bar)**.

The Mira Jump 10.8kW electric shower is designed to operate with a **minimum maintained inlet pressure of 100kPa (1.0 bar)** up to a **maximum static inlet pressure of 1000kPa (10 bar)**.

2. The appliance is normally connected to the cold water mains-fed supply. However, the water supply can be taken from a cold water storage cistern, provided there is a minimum maintained inlet head of water of 7 metres for the 8.5kW, 9.5kW and 10 metres for the 10.8kW (the vertical distance from the base of the cold water storage cistern to the shower fitting handset). To reduce pressure losses and fluctuations, the cistern-fed water supply **must** be independent from other supply draw-offs, and should avoid long horizontal pipe runs and use swept bends rather than 90° elbows. For further advice please refer to the back cover of this guide for Mira Jump Showers contact telephone and fax numbers.
3. The appliance is suitable for installation within the shower area. It is fitted with a pressure relief device and **must** be positioned over a water catchment area with the controls at a convenient height for the user. The shower fitting should be positioned so that it discharges down the centre line of the bath, or across the opening of a shower cubicle, and **must** be directed away from the appliance.
4. The inlet connector is designed to accept plumbing supplies from below, from the side or from the rear of the appliance. The water supply can be fed with 15mm pipe or 10mm microbore pipe, suitably adapted into the inlet connector assembly. If 10mm microbore is used, then an allowance for increased pressure loss **must** be made to ensure that the minimum maintained inlet pressure is achieved.
5. Do not fit the appliance to the wall and tile up to the case. The appliance **must** be fitted onto a finished flat and even wall surface. Otherwise, difficulty may be encountered when fitting the cover, and subsequent operation of the unit could be impaired (small pillars moulded on to the back of the case allow air circulation).
6. Use only the inlet connector assembly supplied with the appliance. Do not use any other types of fitting.
7. Refrain from applying excessive force when making any connections. Always provide mechanical support when making the plumbing connections.
8. This appliance is not designed to have plumbing connected directly to the rear. For a supply connected behind the shower, add an elbow to the supply pipe and connect to the inlet as a rising or side supply.

9. **Do not install the appliance in a position where it may become frozen.** The shower unit **must** not be fitted where it may be exposed to freezing conditions. The shower unit **must** not be used if you suspect it may be frozen.
10. We recommend that a non-restrictive (free-flowing) isolating valve is fitted in the cold water supply pipe to allow the complete maintenance of the appliance. Do not use a valve with a loose washer plate (jumper) as this can lead to a build up of static pressure.
11. To avoid damage to the case when soldered fittings are used, pre-solder the pipework and fittings before connecting them to the inlet stub.
12. Supply pipework **must** be flushed to clear debris before connecting the appliance.
13. The appliance is fitted with a 1/2" BSP male outlet thread, to accept an Mira Jump shower hose.
14. When installed in very hard water areas (above 200ppm temporary hardness) your installer may advise the installation of a water treatment device, to reduce the effects of limescale formation. Appliance malfunction due to excessive limescale formation is not covered by the manufacturer's guarantee. Your local water company will be able to advise on the hardness of water in your area.
15. A hose retaining soap dish is supplied to prevent the handset from dropping below the spillover level of the bath or shower, which could lead to contamination from back-siphonage.
 The supplied hose retaining soap dish should meet the majority of user requirements for shower installations with flexible outlet fittings. However, there will be occasions when the hose retaining soap dish will not provide a suitable solution. In these instances an outlet double checkvalve **must** be fitted. This will increase the required supply pressure typically by 10kPa (0.1 bar). Double checkvalves, fitted in the inlet supply to the appliance, cause a pressure build-up, which could exceed the maximum static inlet pressure for the appliance.
16. Avoid layouts where the shower hose will be sharply kinked. This may reduce the life of the hose.

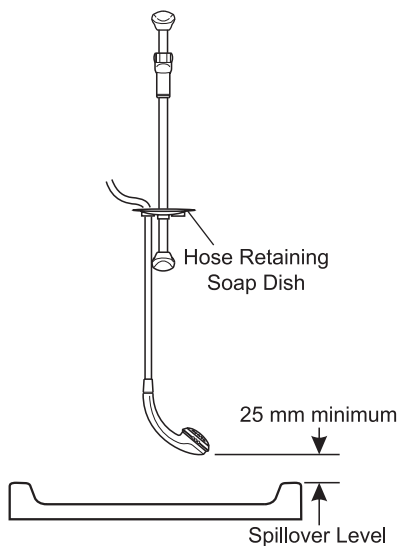


Electrical

1. In a domestic installation, the rating of the electricity supply company fuse and the consumer unit **must** be adequate for the additional demand. This is a high-power appliance, and it is essential to contact your electricity supply company to ensure that the supply is adequate for the appliance. Voltage drop due to local heavy demand will reduce the performance of the shower.
2. The appliance **must** be earthed by connecting the supply-cable earth conductor to the earth terminal.

Supplementary bonding: Within the bathroom or shower room, all accessible conductive parts of electrical equipment and extraneous conductive parts that are likely to introduce earth potential, **must** be electrically bonded to earth using a minimum cable size of 4.0 mm² if the cable is not mechanically protected (2.5 mm² if mechanically protected).

3. The minimum cable size (cross-sectional area) **must** conform to BS 7671.
4. To obtain full advantage of the power provided by this unit, use the shortest possible cable route from the consumer unit to the shower.
5. A 30mA residual current device (RCD) **must** be fitted. This may be part of the consumer unit or a separate unit.
6. A separate, permanently connected supply **must** be taken from the consumer unit to the appliance through a double-pole switch, which has a minimum 3mm contact separation. The switch can be a ceiling mounted pull-cord type within the shower room, or a wall mounted switch in an adjacent room.
7. **DO NOT** twist the individual cable cores of the live and neutral conductors, as this will prevent them from entering the terminal block.
8. **DO NOT** exert strain on the terminal block.
9. **DO NOT** turn-on the electrical supply until the plumbing has been completed.

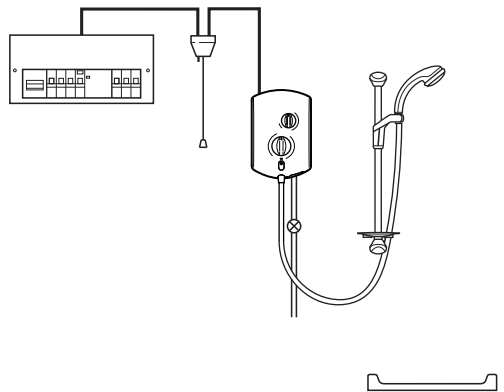


Plumbing and Electrical Schematic


INSTALLATION

Replacing a Shower





1. Check the existing installation is positioned according to the dimensions specified in the diagram (Fig 1.1). The Mira Jump shower can replace showers of the approximate shape and size of those shown.

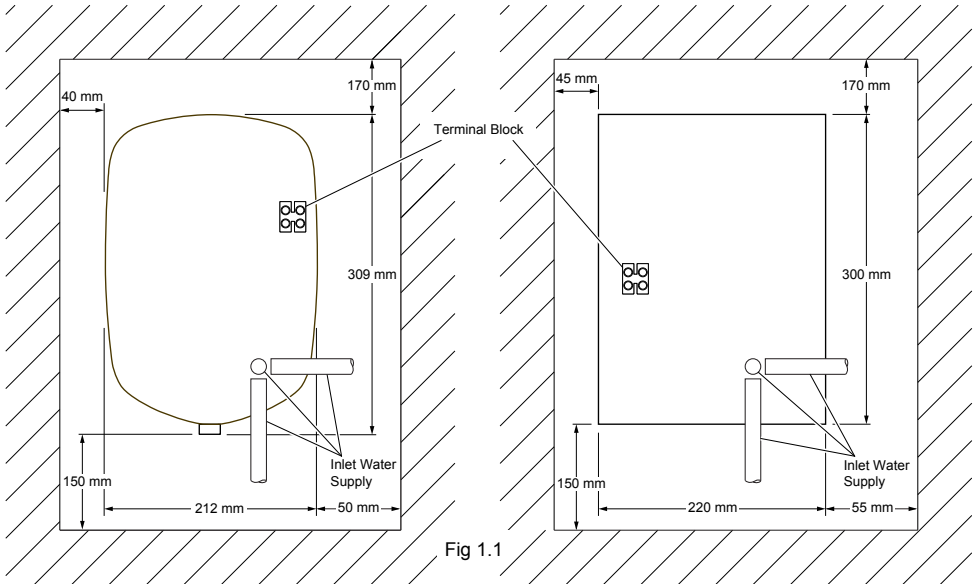

2. Isolate the electrical and water supplies.
3. Disconnect and remove the old shower from the wall.
4. Remove the cover and service tunnel from the Mira Jump shower. Keep the retaining screws (x3) for later use.
5. The inlet water supply and electric supply cable can enter from the directions shown. **Caution!** Only use one set of Live, Neutral and ⊕ (Earth) electrical connections within the shower. Terminal Blocks are provided on both the left and right for convenience when replacing a shower.

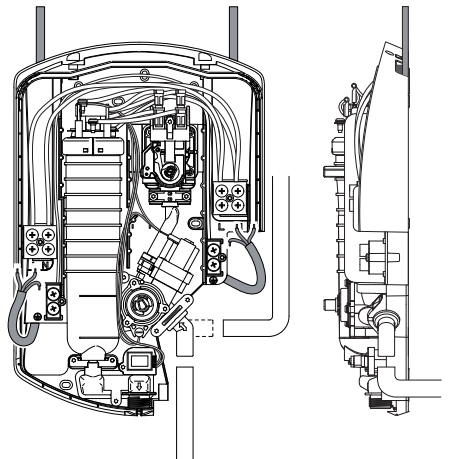

6. Position the Mira Jump shower on the existing pipework. Adjust the shower inlet for water supply pipe position if required. Do not connect shower to pipe.
7. The case has thinned sections that can be removed to allow entry of the electrical cables. Remove either of the top thinned sections of the case for a falling supply.
8. Feed the electrical cable in through the back of the shower and make sure the wires will connect adequately to one of the terminal blocks.
9. Make sure the shower is straight and level, then mark the new fixing holes on the wall.
10. Remove the shower and drill the new fixing holes. Insert the supplied wall plugs.

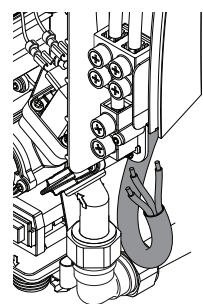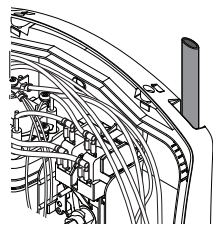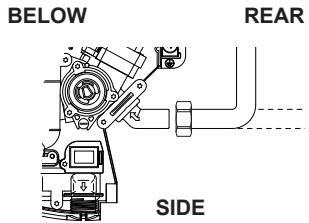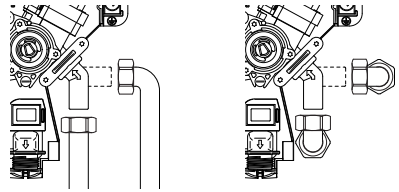


Caution! Do not drill into buried pipes or cables.

Go to **“Connecting Electricity and Water Supplies”** to complete the installation


New Installation

1. Determine the approximate position of the shower according to the dimensions specified in the diagram (Fig 1.1).
2. Place the installation template on the wall and mark the positions of the fixing holes. Make sure that there are sufficient lengths of supply pipe and electrical cable to reach the connection points as shown on the template.

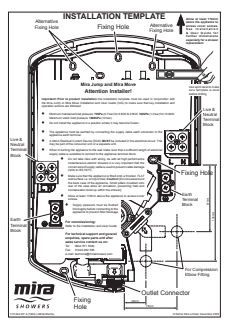

- Remove the installation template and drill the fixing holes. Insert the supplied wall plugs.


Caution! Do not drill into buried pipes or cables.

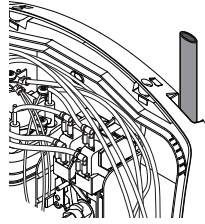

- Remove the cover and service tunnel from the Mira Jump shower. Keep the retaining screws (x3) for later use.


- The case has thinned sections that can be removed to allow entry of the electrical cables. Remove either of the top thinned sections of the case for a falling supply.

- Adjust the shower inlet for water supply pipe position if required.

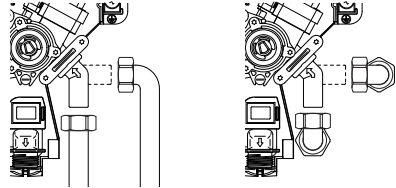

BELOW

REAR

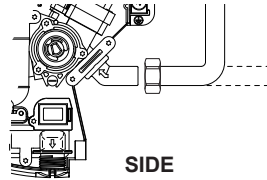


SIDE

Continue to “**Connecting Electricity and Water Supplies**” to complete the installation


Connecting Electricity and Water Supplies

- Flush the inlet water pipe through to clear any debris.
- Connect the inlet supply pipe to the shower inlet using a 1/2” BSP nipple with compression nuts and olives (as shown) or a push-fit connector.

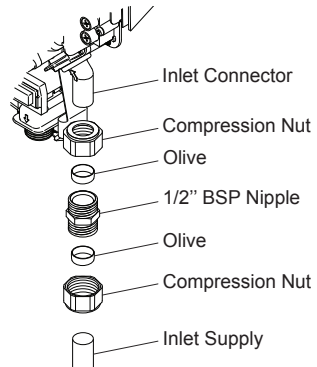

- Fix the shower to the wall with the supplied screws.

- If the water inlet is rear fed, make sure the elbow fitting can be removed for filter maintenance post installation. (see section “**Maintenance - Cleaning the Inlet Filter**”.)

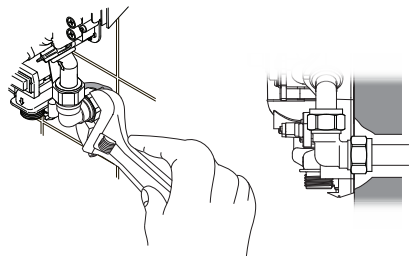

5. Strip a short section of the electrical cables if required. Fit an earth sleeve to the earth wire if required.

Caution! Make sure the bare wire ends are completely dry before connecting to the terminal block.

6. Loosen the screws in the terminal block and insert the bare wires into the clamps:

L (Live) = Brown Wire

⊕ (Earth) = Green Sleeved Wire

N (Neutral) = Blue Wire

Note! Do not twist the cores of the wires or strain the cables to make them reach the terminal block.

7. Tighten the screws in the terminal block so that they securely clamp the bare wires.

8. If necessary, fit an earth bonding clamp to the supply pipe. Make sure the bonding complies with the relevant regulations in force at the time of installation.


9. Turn on the water supply and check for any leaks.

10. Refit the service tunnel and the required insert. If necessary, cut out the slot marked. (Only required if the inlet water pipe is entering the right hand side of the shower.)



11. Replace the cover making sure it fits properly to the case. Do not trap any wires.

12. Fit the three retaining screws.

13. Install the shower fittings, refer to your **Shower Fittings Installation and User Guide**.

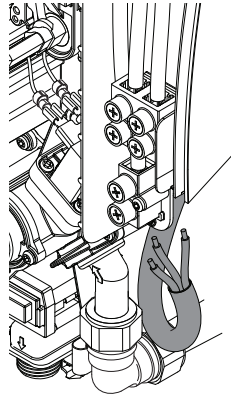

Caution!
Only use one set of Live, Neutral and ⊕ (Earth) connections within the shower.

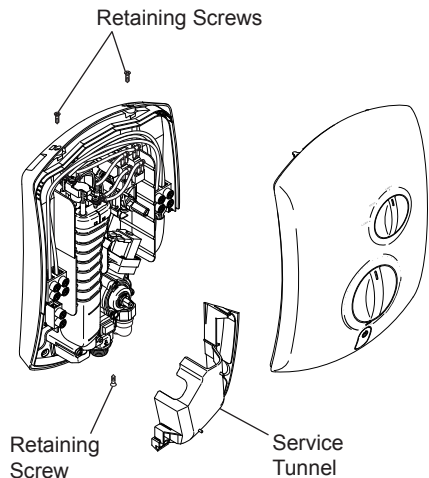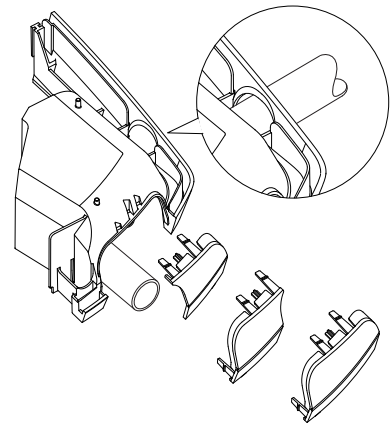

COMMISSIONING

Caution! If you are unsure how electric showers work, please read the **Operation** section before continuing.

1. Turn the temperature control fully anticlockwise to cold and the heater control to “**LOW**”.
2. Switch on the electrical supply at the double pole switch. The power light will indicate electricity is being supplied to the shower.
3. Turn the shower on by pressing the start/stop button.

Check that water flows freely from the shower within a few seconds. If not, refer to the **Fault Diagnosis** section. The water from the handset should be at full force and at a cool temperature.

4. Turn the temperature control slowly clockwise to increase the temperature. The flow will be reduced and the temperature will remain cool (this shows that the flow regulator assembly is operating correctly).
5. Turn the temperature control back anticlockwise to fully cold.

6. Turn the heater control to “**ECO**”. The temperature of the water should rise slightly.

Allow a few seconds for the warm water to reach the handset - this shows that the Eco heater setting is operating correctly.

7. Turn the heater control to “**HIGH**”. The temperature of the water will rise further - this shows that the maximum heater setting is operating correctly.



8. Set the shower temperature by rotating the temperature control as necessary. Turn the control clockwise for warmer water and anticlockwise for cooler water. Allow approximately 10 seconds for the shower to fully adjust to the required temperature.

Note! It is normal for the flow rate (shower force) to change when the temperature is changed. Most changes will go unnoticed.

9. When the required temperature is reached, press the start/stop button to turn the shower off. Water will continue to flow from the handset for a few seconds, as water is cleared from the shower.

10. Switch off the power at the double pole switch. The power light turns off indicating no electricity to the shower.


Note! A slight hissing sound may be heard from the shower during operation. High mains water pressure and high shower temperatures will affect the tone. This is quite normal in use.

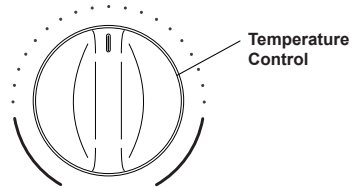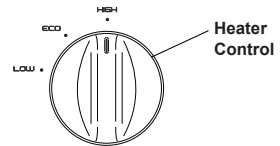


OPERATION

How Your Electric Shower Works

Hot water is produced by passing cold water through a heating tank.

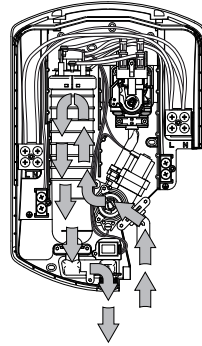

The shower has three heater settings.

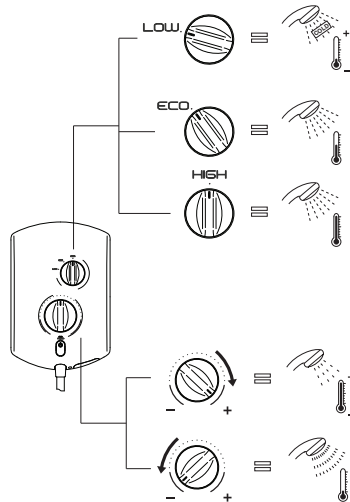

The warmer the shower, the lower the flow rate and vice versa.

What Affects Shower Performance?


The shower's top priority is to keep the desired water temperature constant. To maintain this temperature, the shower may have to automatically change the rate of water flowing through the appliance. Any of the following conditions can cause the shower to change the flow rate (force of the shower) in order to keep the temperature constant. Most changes are minor and will go unnoticed.

1. Seasonal temperature change. (Affects incoming mains water temperature.)
2. Minor changes in electrical supply voltage.
3. Minor changes of mains water supply pressure.
4. Mains cold water draw off. E.g. toilet, washbasin, etc...
5. Heat transfer due to position of mains cold water pipe. E.g. positioned next to hot water pipe, routed through heated area such as loft or airing cupboard.

Operating Instructions

Turn the shower on

1. Switch on the electrical supply at the double pole switch. The power light is illuminated.
2. Turn the shower on by pressing the start/stop button.

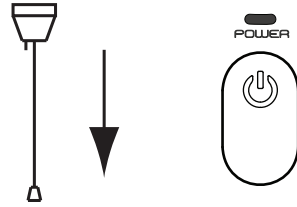


Select heater setting

3. Turn the heater control to **High**. Allow 15-20 seconds for warm water to reach the handset.

For electrical economy, set the heater control to **Eco**. This setting will provide sufficient power during the summer when the mains water temperature is warmer.

For a cold shower, set the heater control to **Low**.



Caution! Always check the water temperature before entering the shower.

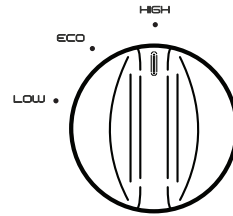

Adjust the showering temperature

4. Adjust the shower temperature by turning the temperature control as necessary. Turn clockwise for hotter water and anticlockwise for cooler water. Allow 10-15 seconds for the shower to fully adjust to the required temperature.

Note! It is normal for the flow rate (shower force) to change when the temperature is changed.

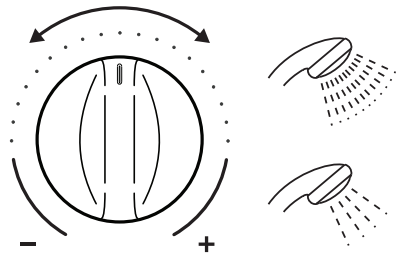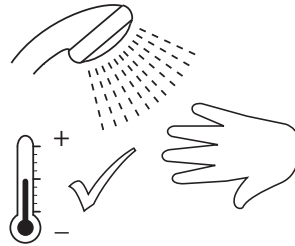


To turn the shower off

5. Turn the shower off by pressing the power button.

Note! A small amount of water may continue to flow from the handset for a few moments.

6. Switch off the electrical supply at the double pole switch. The power light turns off.

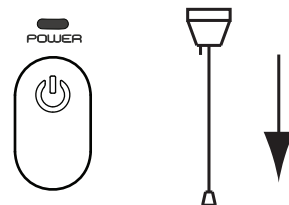

FAULT DIAGNOSIS

The troubleshooting information tabled below gives you details on probable causes and remedies should difficulties be encountered whilst the shower is in operation.

Warning! There are no user serviceable components beneath the cover of the appliance.

ONLY A COMPETENT TRADESPERSON SHOULD REMOVE THE FRONT COVER!

Malfunction	Probable Cause	Possible Remedy
Appliance fails to operate.	Electrical supply isolated at double pole switch. Fuse blown or MCB/RCD tripped, indicating possible electrical fault.	Switch on electrical supply via the pullcord or wall mounted switch. Renew the fuse or reset the MCB/RCD. If fault persists, contact your installer.
No water or very low flow rate.	The handset sprayplate and/or hose is blocked. Water pressure below minimum required for appliance operation. Electrical supply isolated at double pole switch. The fuse is blown or the MCB/RCD has been tripped, indicating a possible electrical fault.	Clean the handset sprayplate (see Maintenance). Check the hose for blockage or damage. Clear blockage where possible or replace the hose. Make sure incoming mains water stopcock and/or appliance isolating valve is fully turned on. Switch on electrical supply via the pullcord or wall mounted switch. Renew the fuse or reset the MCB/RCD. If the fault persists, contact the shower installer.
Shower is too hot during the summer.	The incoming water is warmer in the summer, so the shower heater setting is too high.	Turn the heater control to Eco and adjust the temperature control until the desired temperature is reached.
Shower is too hot.	The handset sprayplate is blocked.	Clean the handset sprayplate (see Maintenance).
Turning the temperature control does not affect the water temperature.	The handset sprayplate and/or hose is blocked.	Clean the handset sprayplate (see Maintenance). Check the hose for blockage or damage. Clear blockage where possible or replace the hose.

Malfunction	Cause	Remedy
The temperature cycles between hot and cold.	<p>The handset sprayplate is blocked.</p> <p>The temperature is set too high. This is causing the thermal switch to turn off the heating element to reduce the water temperature.</p>	<p>Clean the handset sprayplate (see Maintenance).</p> <p>Turn the temperature control anticlockwise to reduce the water temperature.</p>
No hot water or reduced temperature from shower, with the controls in any position.	The water pressure is below the minimum required. This can be due to other outlets (e.g. toilet, garden hose, washing machine, etc.) drawing water while the shower is being used.	Turn off other mains water appliances whilst shower is in use. Make sure incoming mains water stopcock and/or appliance isolating valve is fully turned on. If the fault persists, contact the shower installer.
ALL OF THE FOLLOWING REMEDIES MUST BE PERFORMED BY A COMPETENT TRADESPERSON ONLY!		
No hot water or reduced temperature from shower, with the controls in any position.	<p>Insufficient water supply pressure.</p> <p>Failure of a microswitch or the thermal switch.</p> <p>An internal wiring connection has failed.</p> <p>One of the heater tank elements has failed.</p> <p>Switch assembly diaphragm fault.</p>	<p>Make sure incoming mains water stopcock and/or appliance isolating valve is fully turned on. Check incoming mains water pressure.</p> <p>Check the continuity of the switches, using a suitable continuity measuring device. Replace the switches as necessary.</p> <p>Check the integrity of the internal wiring.</p> <p>Replace the heater tank.</p> <p>Replace switch assembly.</p>
The shower temperature cycles between hot and cold.	The temperature is set too high. This is causing the thermal switch to turn off the heating element to reduce the water temperature.	Turn the temperature control anticlockwise to reduce the water temperature. DO NOT TAMPER with the thermal switch.

(continued)

Malfunction	Cause	Remedy
Turning the temperature control does not affect the water temperature.	<p>The flow regulator assembly is faulty.</p> <p>The handset sprayplate is blocked.</p>	<p>Replace.</p> <p>Remove and clean the handset sprayplate (see Maintenance). If the fault persists, contact Kohler Mira Customer Services.</p>
No water or very low flow rate.	<p>The handset sprayplate and/or hose is blocked.</p> <p>Service tunnel or cover not fitted correctly causing Start/Stop button not to operate.</p> <p>Water pressure below minimum required for appliance operation.</p> <p>The heater tank is excessively scaled.</p> <p>The flow regulator assembly is faulty.</p> <p>The inlet filter is blocked.</p> <p>The fuse is blown or the MCB/RCD has been tripped, indicating a possible electrical fault; for example, heater tank element failure.</p>	<p>Clean the handset sprayplate (see Maintenance). Check the hose for blockage or damage. Clear blockage where possible or replace the hose.</p> <p>Check case inserts are cut and fitted correctly. Check services (electrical or plumbing) are not interfering with location of service tunnel or cover.</p> <p>Make sure incoming mains water stopcock and/or appliance isolating valve is fully turned on.</p> <p>Insufficient water supply pressure. Supply pressure must be a minimum of 70kPa (0.7 bar) for 8.5kW & 9.5kW, 100kPa (1.0 bar) for 10.8kW. Note! If other appliances are operating, pressure may drop below the required minimum.</p> <p>Replace.</p> <p>Replace.</p> <p>Clean the inlet filter (see Maintenance).</p> <p>Renew the fuse or reset the MCB/RCD. If the fault persists, contact Kohler Mira Customer Services to help diagnose the fault and replace any parts as necessary.</p>

Malfunction	Cause	Remedy
<p>Water leaks from the bottom of the case near the outlet, and there is no flow from the handset.</p>	<p>The pressure relief valve in the tank has been triggered, (the shower has a pressure relief valve assembly that works to reduce the damage if the outlet is blocked or the unit is frozen).</p> <p>Switch assembly diaphragm fault.</p>	<p>Resolve the blocked outlet, and replace the tank assembly.</p> <p>Replace switch assembly.</p>
<p>The water cannot be turned off.</p>	<p>The flow regulator assembly is faulty.</p> <p>Flow valve, solenoid, or Start/Stop switch faulty.</p> <p>The supply pressure is below the minimum requirement, 50kPa (0.5 bar).</p>	<p>Replace.</p> <p>Diagnose and replace necessary parts.</p> <p>Check the static water pressure. Note that the static pressure may fall below minimum requirement when other appliances are drawing water, for example the dishwasher or washing machine.</p>

MAINTENANCE

Warning! Any maintenance **must** be carried out by a competent tradesperson following the instructions provided. Before replacing any parts, make sure that the underlying cause of the malfunction has been resolved. There are no user-serviceable components beneath the cover of the appliance. Only a competent tradesperson should remove the cover.

Cleaning

Many household and industrial cleaners contain abrasive and chemical substances that can damage the finish of your shower. Only clean the shower and fittings with a mild washing-up detergent or soap solution, and then wipe them dry with a soft cloth.



Handset

Poor shower performance and early failure of the appliance can be avoided by regular cleaning of the handset and in particular the spray plate holes. Use your thumb or soft cloth to wipe the rubber nozzles. The handset must be descaled regularly.


Cleaning the Inlet Filter

Warning! Make sure that the electrical supply is turned off at the mains and the appropriate circuit fuse is removed. Turn off inlet water supply.

1. Remove the three cover retaining screws, the cover and the service tunnel.
2. Remove the screws that hold the inlet clamp bracket in position and remove the clamp bracket.
3. Remove the two screws shown at the base of the tank.
4. Carefully pull the flow valve assembly and the heater tank away from the case. Make sure that you ease the inlet connector off the supply pipe.
5. Remove the inlet connector complete with 'O' seal. Use a suitable tool to withdraw the filter. Clean or renew the filter.
6. Refit the filter, make sure that the filter is correctly orientated and pushed fully home.
7. Refit the components in reverse order.

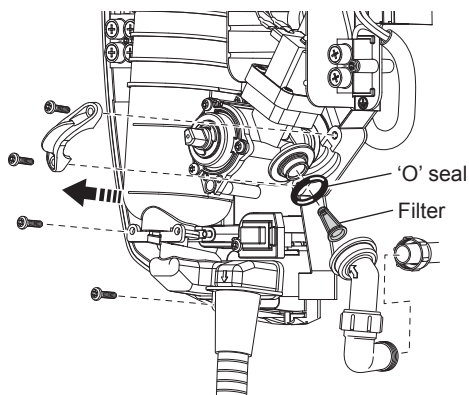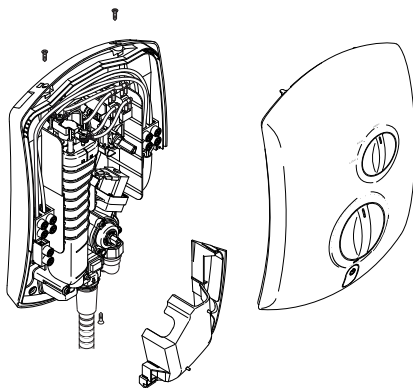

ACCESSORIES

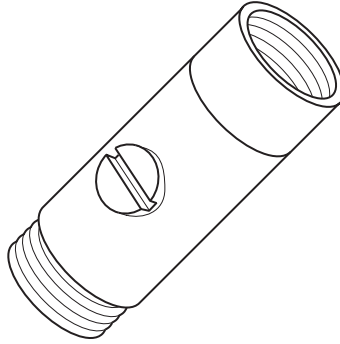



DCV-H: An outlet double check valve, designed to prevent the backflow or backsiphonage of potentially contaminated water, through shower controls which are fitted with a flexible hose as part of the outlet shower fitting. Available as an optional accessory from all Mira Showers stockists.

SPARE PARTS

Spare Parts List

416.41	Thermal Switch
416.51	Solenoid Coil
439.88	Seal Pack (components identified 'C')
1693.307	Cover Assembly
1693.310	Service Tunnel & Inserts Pack
1693.312	Service Inserts Pack
1693.314	Heater Tank Assembly 8.5kW
1693.315	Heater Tank Assembly 9.5kW
1693.316	Heater Tank Assembly 10.8kW
1693.317	Flow Valve Assembly 8.5kW
1693.318	Flow Valve Assembly 9.5/10.8kW
1693.319	Outlet Assembly
1693.320	Latching Switch Assembly
1693.321	Power Neon Assembly
1693.322	Mains Terminal Block Assembly
1693.323	Earth Terminal Block Assembly
1693.325	Screw Pack (components identified 'A')
1693.326	Push Button
1693.328	Inlet & Clamp Bracket Pack
1693.331	Component Pack (components identified 'B')
1693.334	Switching Assembly

Spare Parts Diagram

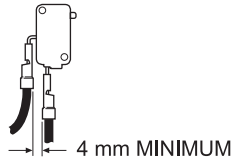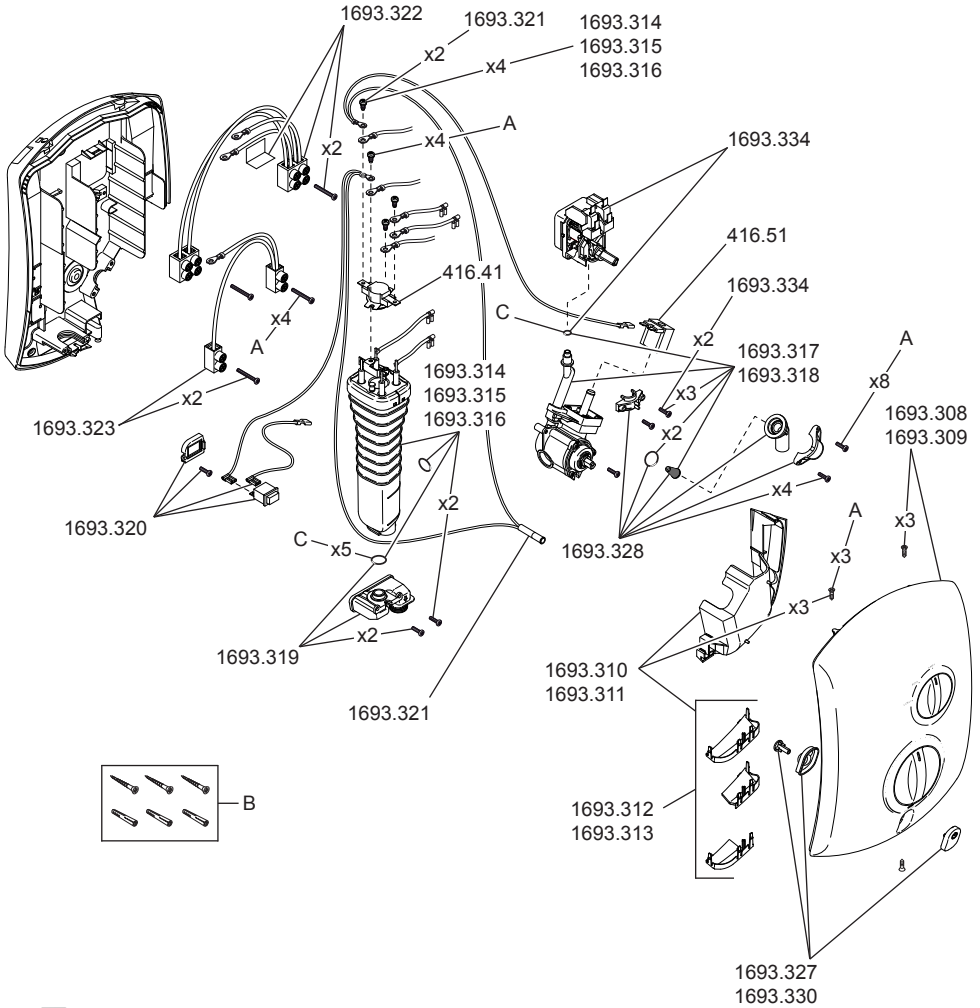

Important Note! Push-fit connectors **must** be assembled back to back onto terminals of micro-switches.

A minimum air gap of 4mm **must** be maintained between the connectors after assembly.

CUSTOMER SERVICE

Guarantee

Your product has the benefit of our manufacturer's guarantee which starts from the date of purchase.

To activate this guarantee, please return your completed registration card, visit our website or free phone 0800 0731248 within 30 days of purchase (UK only).

Within the guarantee period we will resolve defects in materials or workmanship, free of charge, by repairing or replacing parts or product as we may choose.

This guarantee is in addition to your statutory rights and is subject to the following conditions:

- The product must be installed and maintained in accordance with the instructions given in this user guide.
- Servicing must only be undertaken by us or our appointed representative. **Note!** if a service visit is required the product must be fully installed and connected to services.
- Repair under this guarantee does not extend the original expiry date. The guarantee on any replacement parts or product ends at the original expiry date.
- For shower fittings or consumable items we reserve the right to supply replacement parts only.

The guarantee does not cover:

- Call out charges for non product faults (such as damage or performance issues arising from incorrect installation, improper use, lack of maintenance, build up of limescale, frost damage, corrosion, system debris or blocked filters) or where no fault has been found with the product.
- Water or electrical supply, waste and isolation issues.
- Compensation for loss of use of the product or consequential loss of any kind.
- Damage or defects caused if the product is repaired or modified by persons not authorised by us or our appointed representative.
- Routine maintenance or replacement parts to comply with the requirements of the TMV 2 or TMV 3 healthcare schemes.

What to do if something goes wrong

If your product does not function correctly when you first use it, contact your installer to check that it is installed and commissioned in accordance with the instructions in this manual.

Should this not resolve the issue, contact our Customer Services Team who will offer you or your installer advice and if applicable arrange for a Service Technician to call.

If the performance of your product declines, check in this manual to see if simple home maintenance is required. If you require further assistance call our Customer Services Team.

Extended Guarantees

A selection of protection plans are available that enable you to cover repair bills for the life of your policy (excludes Eire). Ring 01922 471763 for more details.

Helpdesk Service

Our dedicated Customer Services Team is comprehensively trained and can offer help and advice, spare parts, accessories or a service visit. We will need you to have your model name or number, power rating (if applicable) and date of purchase. As part of our quality and training programme calls may be recorded or monitored.

Mira Showers Website (www.mirashowers.co.uk)

From our website you can register your guarantee, download additional user guides, diagnose faults, purchase our full range of accessories and popular spares, refer to our FAQ's and request a service visit.

Spares and Accessories

We maintain extensive stocks of genuine spares and accessories and aim to provide support throughout the product's expected life. Payment can be made by phone at time of order using most major Credit or Debit cards and we aim to despatch orders within two working days. Items purchased from us are guaranteed for 12 months from date of purchase. For safety reasons spares exposed to mains voltages should only be fitted by competent persons.

Returns – items can be returned within one month of date of purchase, providing that they are in good condition and the packaging is unopened. Please obtain authorisation from our Customer Services Team before return. We reserve the right to apply a 15% restocking charge.

Service / Repairs

We have a nationwide team of Service Technicians who can carry out all service or repair work to your product within the guarantee period and beyond. You have the assurance of a fully trained Mira Technician, genuine Mira spare parts and a 12 month guarantee on any chargeable work done.

Payment should be made directly to the Service Technician who will accept most major Credit or Debit cards.

To Contact Us

UK

Telephone: 0844 571 5000

Mon to Fri 8:00 am - 5:30 pm, Sat 8:30 am - 3:30 pm

E-mail: technical@mirashowers.com

Fax: 01242 282595

By Post: Mira Customer Services Dept, Cromwell Road, Cheltenham, Gloucestershire, GL52 5EP

Eire

Telephone: 01 459 1344

Mon to Fri 9:00 am - 5:00 pm

E-mail: sales@modernplant.ie

Fax: Dublin 01 459 2329

By Post: Modern Plant Ltd (Dublin), Otter House, Naas Road, Clondalkin, Dublin 22

Mira is a registered trade mark of
Kohler Mira Limited.

The company reserves the right to alter
product specifications without notice.



FM 14648

mira
SHOWERS